



## USING THE WEB BASED CONFIGURATION PAGE IN THE PRINTEK MOBILE PRINTER:

1. Turn the printer on by pushing the POWER (green) button.
  - a. The printer will perform a self-test. The printer will beep and the red LED will turn off when the self-test is complete and no problems are found.
2. Plug the printer into a USB port on your PC using a standard USB A to USB- B mini or USB-C cable. (Depending on the model Printek printer you have.)
3. Push the POWER (green) button twice rapidly to set the printer into configuration mode.
  - a. The green and red LEDs will flash when the printer is in SETUP mode.
4. Open the Settings folder.
5. Select Devices.
  - a. This will open the Bluetooth and other devices folder.
  - b. Under the Other Devices listing you should see USB Ethernet/RNSID Gadget:

### Other devices



dongle



USB Ethernet/RNDIS Gadget


- c. If you see a **USB Serial Device** listed you will need a patch to fix the RNDIS driver. Please call Printek Technical Support at 800-368-4636 x 208 for the patch.
6. Open a web browser.
7. In the address bar of the web browser type the I.P. address, 169.254.200.1.
8. This will open the Login screen for the printer:

A screenshot of the printer's web-based configuration interface. The title bar reads "I80 Configuration Interface". Below the title bar, there is a "Password:" label followed by a text input field. Underneath the input field is a dark grey "Login" button. Below the button is a language selection dropdown menu currently set to "English". At the bottom right of the interface, the URL "www.printek.com" is displayed.



9. The default password is 0000(4 zeros).

10. From the Main page select the Menu option you would like to change:

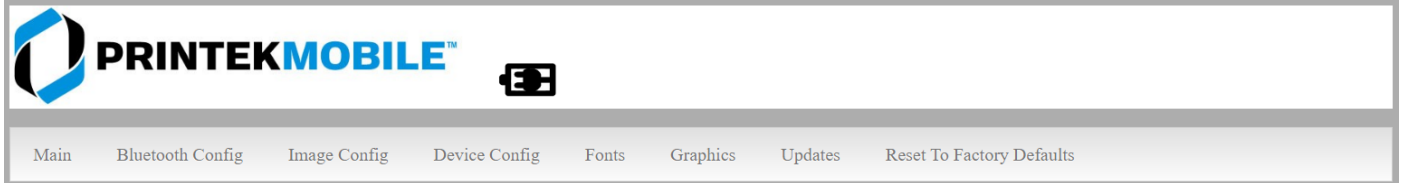

11. After making changes be sure to click on the **Submit Changes** button before leaving the menu option.

12. To return the printer to normal operating condition push the POWER (green) button twice rapidly or power off the printer.